
2-channel 7 day timers

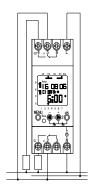

According to version

preprogrammed with the

current time and


Summer/winter norm time



Safety Information

The connection and installation of electrical must be performed by a skilled electrician only. Any intervention into or modifications to the appliance shall lead to the lapse of all warranty rights.

Comply with your national regulations and all relevant safety stipulations.

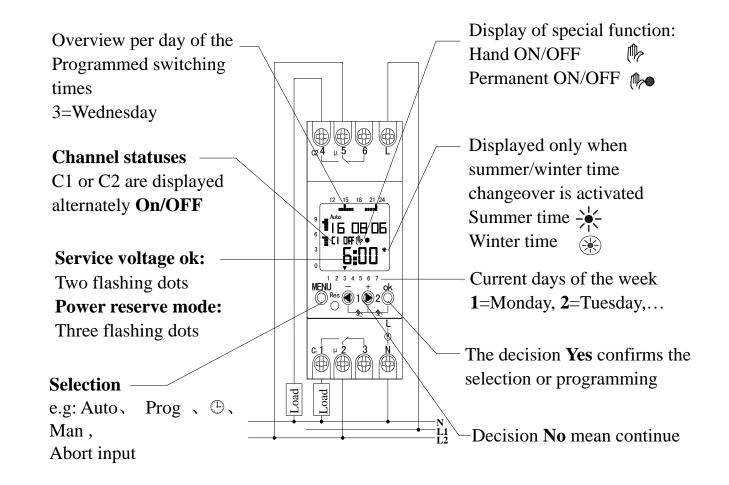

First contact

Info

The timer is delivered in so-called sleep mode .To increase the power reserve the switch clock changes to the sleep mode after approx.10 minutes.

To activate without a service voltage Briefly press the Menu key.

Activate with mains voltage

If the timeswitch is already pre- programmed with the actual time, the weekday, and the changeover setting for Summer/Winter time, the actual time and status display appears after selection of the National language.


If the timer is not pre-programmed

First select your national language and then enter the actual date and time.

Activate the clock, Select the national language

By pressing the \oplus or \odot keys. select your national language.

Store your selection by pressing the \overline{OK} key.

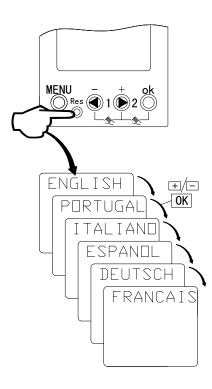

RESET(only in case emergency):If you perform a RESET of the timer, the individual settings will be deleted. The programmes switching times remain intact. Press the **Res** key with and a pointed object for approx.1 second.

Ok The decision **Yes**.confirms the selection

or programming.

+ The decision No, means

continue.

Set or amend by pressing the

 \oplus or \odot keys.

For programming, viewing, amending or deleting

First of all read the text display.

Menu selection

Select by pressing the Menu **Prog** key.

Confirm by pressing oK.

By pressing the \oplus key select the desired menu.

e.g. New, View ,Amend or Delete.

Confirm your selection by pressing oK .

Set or change: by pressing \oplus or \bigcirc .

Store by pressing OK.

To display the switching times:

In the menu View, press the ok key several Times.

Programming the switching time

Switching times for lighting systems, machines, ventilation systems, alarm systems etc.

Formation of day groups

If the same switching times are active on several days of the week, the occupy just **one** memory location.


44 memory locations are available.

Group formation

In answer to text question
Copy, decide by pressing the
Key that the day program
Should be copied to another
day of the week.

The **Mixed programming** of switching ,pulse and cycle times is allowed.

When programming an ON and OFF switching time, e.g. Monday 9 AM, It is always the programme the last setting is excuted.

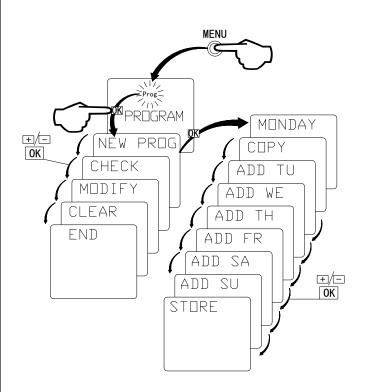

Example: Switching on the lighting of a sports hall on Mon, Tues, Fri. from 8.30h until 12h.

Programming example

Select **Prog** by pressing the Menu key.

Store your selection by pressing the OK key.

Select **New** by pressing \oplus or \bigcirc .

Store your selection by pressing the ok key.

Select channel C1 or C2 by pressing \oplus or \bigcirc .

Store your selection by pressing \overline{OK} .

Select **ON/OFF** by pressing \oplus or \bigcirc .

Store your selection by pressing \overline{OK} .

Set the hours and minutes by pressing the \oplus or \bigcirc key.

Store selection by pressing OK.

To store one day of the week only

Select weekday by pressing \oplus or \bigcirc .

Select store by pressing \oplus .

Store by pressing OK.

To copy to other days of the week

Store **COPY** by pressing OK.

Select weekday by pressing \oplus or \odot .


Store by pressing OK.

To leave out a day of the week ,skip by pressing the \oplus key.

Finally select the **store** display by pressing \oplus .

Store your selection by pressing ok .

Individual deletions

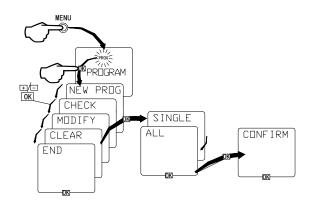

Override Permanent ON or OFF

Via the automatic menu Auto only

+	Channel C1	+ ok Channel C2
Press the two Key for approx. 1 s.	Manual preselection: Press keys simultaneously Channel C1 switches alternately ON or OFF. Symbol preselection is corrected again by the stored program.	Manual preselection: Press keys simultaneously ChannelC2 switches alternately ON or OFF. Symbol papears. Manual preselection is corrected again by the stored program.
Press the two Key for approx. 2 s.	Permanent ON OFF	Permanent ON OFF
Cancellation of manual preselection/permanent switching: Briefly press the keys shown above.		

Setting/correcting the date and time Summer/winter time

Automatic summer/winter time correction

According to version the timer is pre-programmed ex-works complete with the change-over. Should you switch off the automatic facility or wish to alter it, first of all read the text display .


Select by pressing \oplus or \bigcirc . Store by pressing $\bigcirc K$.

Free Prog to select sum/win change-over other than EUR-GB –USA.

Select sum/win ,and after with sum/win. Store with OK.

Select rule FREE-with buttons \oplus or \bigcirc . Input month and weeks for sum/win.

Store with OK.

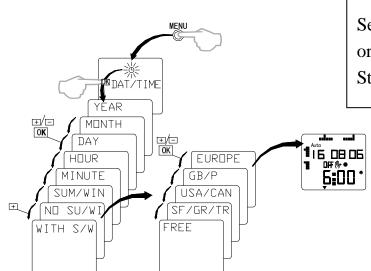

Read the text display first of all.

Select by pressing the \oplus key or \ominus keys.

Store by pressing the OK key.

Note: In sum/Win free Prog the time change is set automatically at Sunday 2 AM.

Time change is not available.

Common technical specifications

Rated voltage: 230-240v~+6%-10%

Frequency: 50-60Hz

Own consumption: max.7.5 VA

Contact: zero-potential, gap less than 3mm Switching power: 16A, 250V~, $\cos \varphi = 1$;

 $10A, 250V \sim, \cos \varphi = 0.6$

Incandescent lamp load:2300 W

Halogen lamp load:2300 W

Timing basic: quartz

Working precision: ≤±1 sec./day at 20°C

Shortest switching time: 1 minute **Display:** LCD display with text line

Operating control elements: 4 touch keys and

1 reset key

Power reserve: approx. 4 years with display with full controllability(temp. 20°C) by means of an

environmentally friendly lithium battery

Permissible ambient temperature:

-10°C...+50°C

Weight: approx.170 g

Dimension drawings

