

Operation Manual for Temp & Humidity Meter

1 General Description:

This Temperature & Humidity Meter is characterized at:

- Large- LCD display
- Multi-function
- Low power consumption
- High stability & accuracy

2 Features:

- Display temperature, humidity and time simultaneously
- Memory of MAX & MIN measuring value
- 12-hour/24-hour displaying system selectable
- °C/°F unit selectable
- integral-hour alarm function
- Alarm function
- Clock & calendar function (month and date)
- Desk - top placing or wall hanging

3 Specification:

- Temperature range: -50~70°C (-58~158°F)
- Humidity range: 10%~99%RH
- Resolution: Temp: 0.1°C(0.1°F) / Humidity: 1%RH
- Accuracy: ±1.0°C(1.8°F) / ±5% RH (40%-80%)
- Power supply: 1.5V(AAA size) x 1
- Product dimension: 112x110x24mm
- Weight: 103g
- Storage condition: -20°C~60°C, 20~80%RH

4 Operation

- 4-1 Open the battery cover according arrow direction, pull out the insulation paper and push back the cover, then the meter works.

4-2 Key function

- [°C/°F]: °C/°F unit selectable
- [MODE]: switching between CLOCK and ALARM display
- Setting time, alarm, 12-hour/24-hour displaying and date
- [ADJ]: adjust value of setting
- [MAX/MIN]: display or clear memorized MAX and MIN value.
- [RESET]: clear all set and memorized value

- 4-3 press & hold [MODE] key for 2 seconds, then time reading will twinkle, press [ADJ] to adjust MINUTE value, continually press [MODE] key with [ADJ] to set value of HOUR, 12-hour/24-hour displaying, MONTH and DATE

- 4-4 Clock status (DOT between HOUR and MINUTE twinkle), press [MODE] once to change CLOCK display to ALRM function (DOT between HOUR and MINUTE doesn't twinkles), press [ADJ] to turn on or turn off ALARM function and INTEGRAL-HOUR ALARM function, press [MODE] for another 2 seconds to set ALARM time and turn on INTEGRAL-HOUR ALARM function (symbol appears).

- 4-5 At mode of alarm, the meter will turn back to CLOCK display mode without operation after 1 minute.

- 4-6 At mode of CLOCK , press [ADJ] one time, the CLOCK display will be changed to CALENDAR display (Month and Date) and the meter will return to CLOCK display after 3 seconds.

- 4-7 Press [MAX/MIN] one time to display memorized MAX value of temperature and humidity, press another time to display MIN value of temperature and humidity.
Press [RESET] for 2 seconds to clear memorized MAX and MIN value of temperature and humidity.

5 CAUTIONS:

- Please press [RESET] key for first time use and replacement battery .
- For environmental protection, please put the replaced battery to indicate place.